

ARES M16-006

Exploded view diagram of the ARES M16-006 airsoft rifle, showing various components labeled with codes. The diagram includes the barrel, receiver, magazine, and battery.

Key components and labels visible in the diagram:

- Barrel Assembly:** E1, E2, E3, E4*2, E5, E6, E7, E8, E9, E10, E11, E12, E13, E14, E15, E16, E17, E18, E19, E20, E21, E22, E23, E24.
- Receiver and Action:** C1, C2*2, C3, C4, C5*8, C6, C7, C8, C9, C10, C11, C12, C13, C14, C15, C16*2, C17*2, C18*2, C19*2, C20, C21*5, C22, C23, C24, C25, C26*2, C27, C28, C29, C30, C31, C32, C33, C34, C35, C36*2, C37*2, C38, C39, C40, C41.
- Magazine and Battery:** H-all (magazine), B-all (battery).
- Stock and Grip:** A1, A2, A3, A4, A5, A6, A7*3, A8, A9, A10, A11, A12, A13.
- Trigger and Safety:** D1, D2, D3, D4*2, D5, D6, D7, D8, D9*2, D10*2, D11, D12, D13, D14, D15, D16, D17, D18, D19.

